
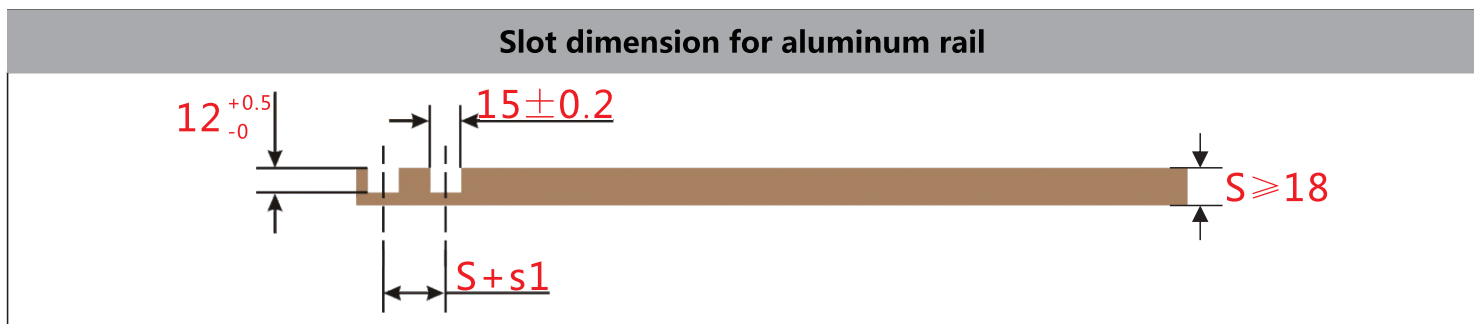
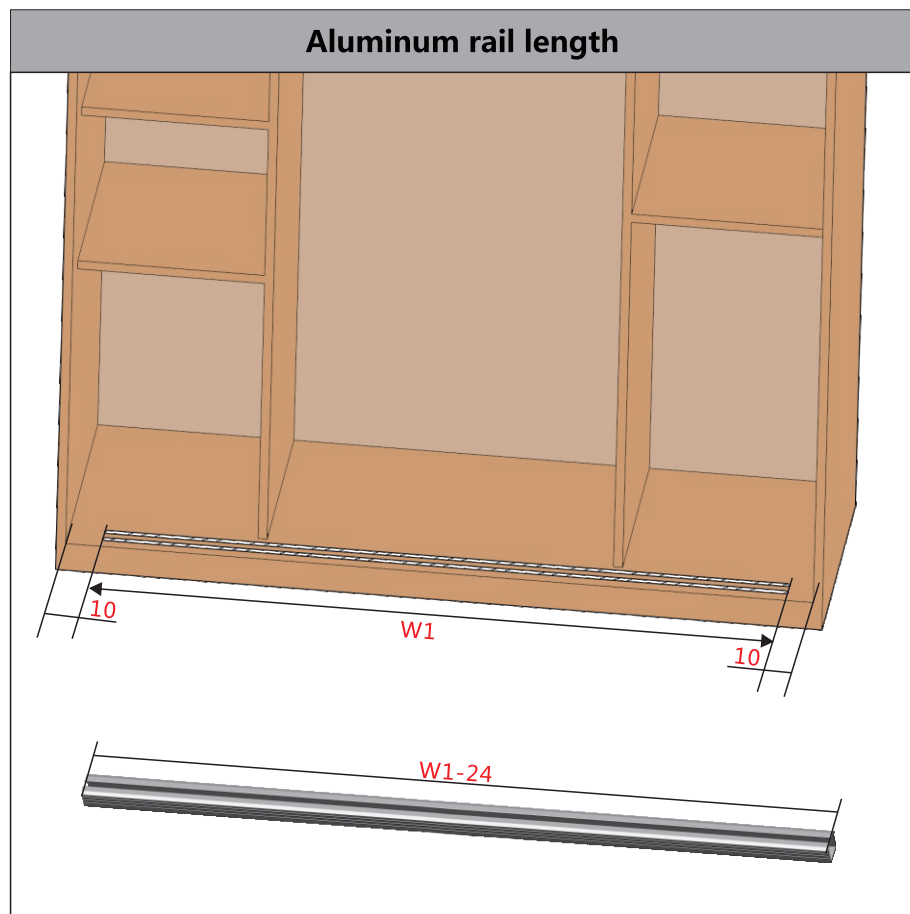


## Soft Close Sliding Door System Installation Guide

| Accessory                        | Drawing | 2 doors | 3 doors | Accessory                 | Drawing | 2 doors | 3 doors |
|----------------------------------|---------|---------|---------|---------------------------|---------|---------|---------|
| Runner                           |         | 8       | 12      | Allen Key                 |         | 1       | 1       |
| Damper                           |         | 4       | 4       | End cap for Aluminum rail |         | 8       | 8       |
| ST4*16 Cross head tapping screws |         | 32      | 48      | Aluminum rail             |         | 4       | 4       |

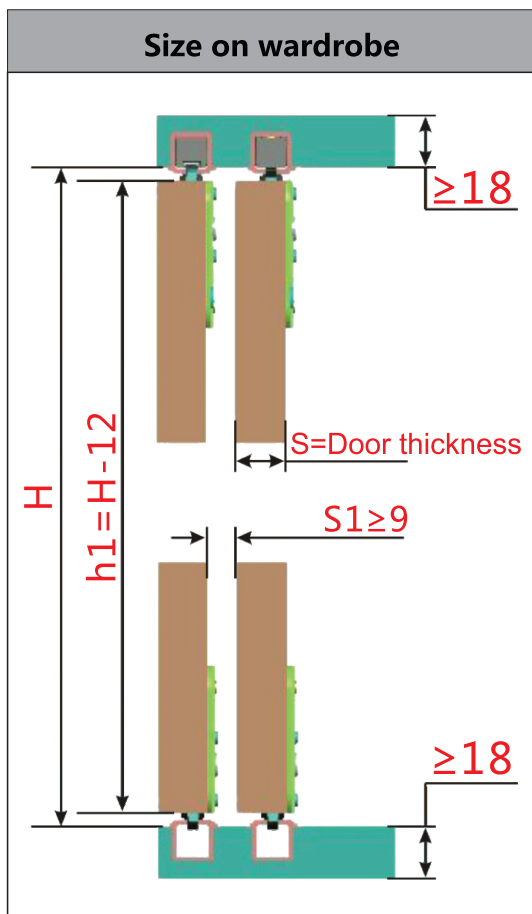

### 1. Damper installation

Put damper inside the rail, attention direction of damper.

60mm left between damper and end of rail.

### 2. Rail installation

Damper install on the upper track.

### 3. Plastic end function

Turn the screw of end cap to take out the rail

### 4. Set up the damper

Regulate the damper according to picture

According to picture

### 5. Slot on door panel

make slot symmetric

slot size

135, 12, 60, 49, 135

### 6. Runner installation

1. Screw the runner

2. Lock the runner

Attention: runner should be horizontal during installation

### 7. Door panel installation

1. Door can't be lean over 20 degree on rail in case of breaking rail

2. Loose the button on runner

### 8. Door gap regulation

1. Push the door at the end to position the damper

2. Screw the runner to regulate up and down gap

### 9. Lock the damper

Use allen key lock the damper

### 10. Remark

1. This manual is only aiming at the standard configuration of wardrobe to explain installation method, which installs the damper into the upper rail. Customers can use different installation method according to the actual application. Customers can use one upper damper and one down damper opposite angles installation; and also can use double upper dampers or double down dampers installation in the same time, or double down damper installation only.

2. T309 product also apply to solid wood or board furniture, such as wardrobe, cupboard cabinet, bookcase, TV cabinet, Decoration cabinet etc.