


445.50 mm

148.50 mm

Swing trays installation instruction

T=Cabinet	Width*Depth*Height
900 mm	785*468*(600-730)
1200 mm	960*475*(600-730)

Attn: This instruction is fit for the right open, Left open is symmetry.

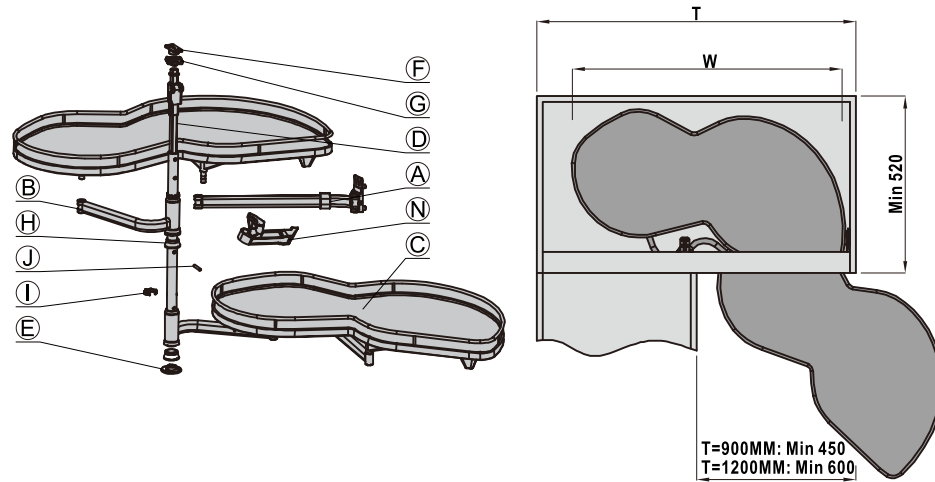


Accessories

2PCS	2PCS	2PCS	1PCS
1PCS	1PCS	1PCS	2PCS
2PCS	1PCS	10PCS	16PCS
2PCS			

Page 1

1


1.1

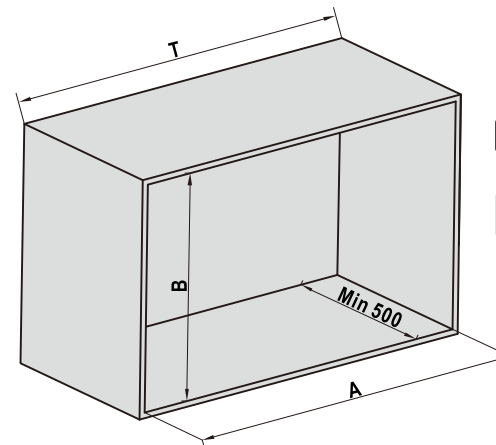

T=Cabinet	A	B
900 mm	Min 860	600-700
1200 mm	Min 1060	600-700

2


2.1

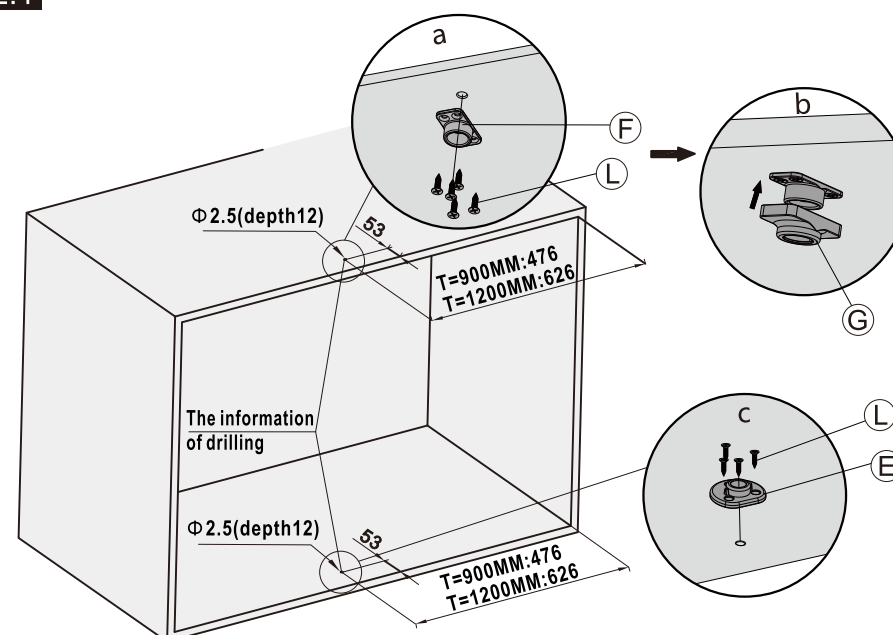


Page 2

3

3.1

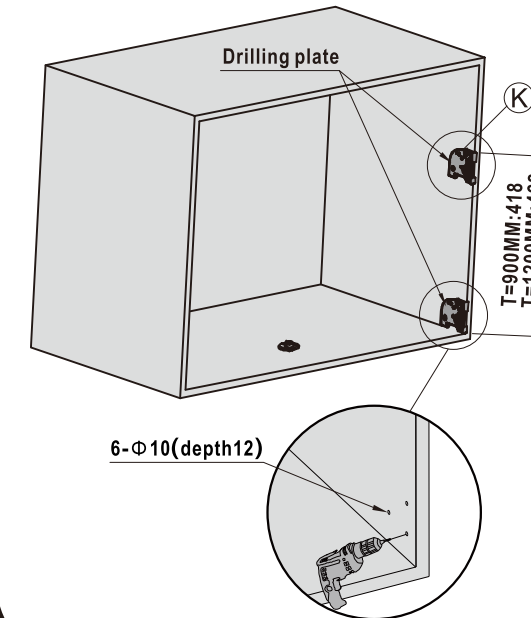


3.2

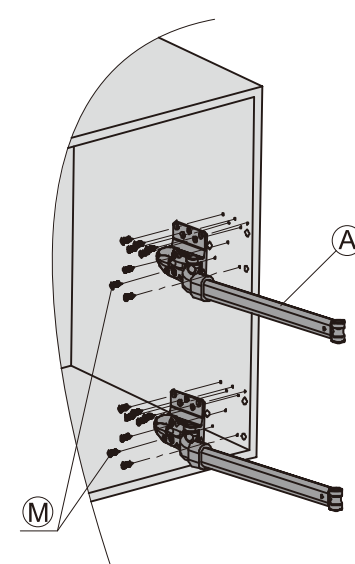

4


4.1

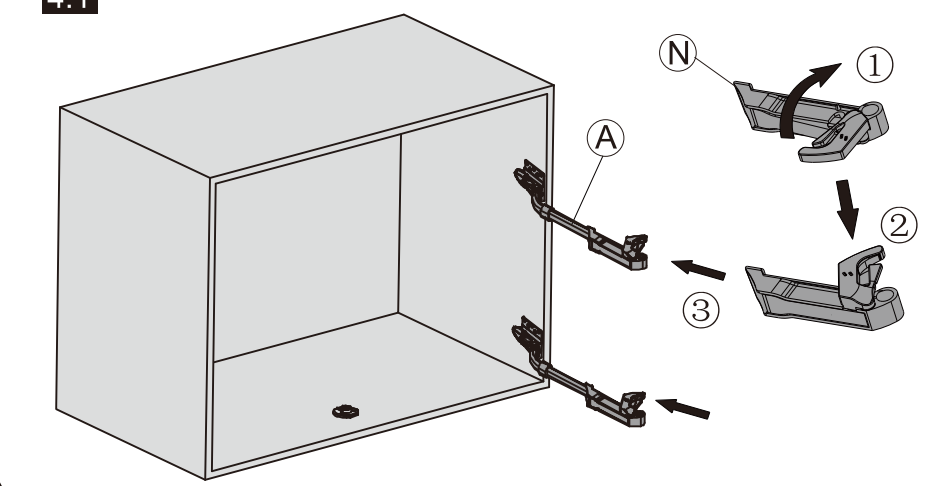


Page 3

5

5.1

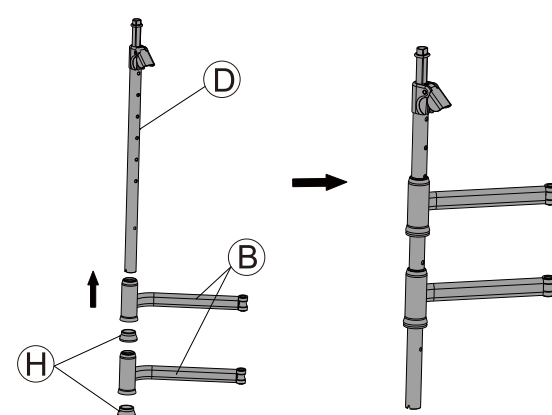


5.2

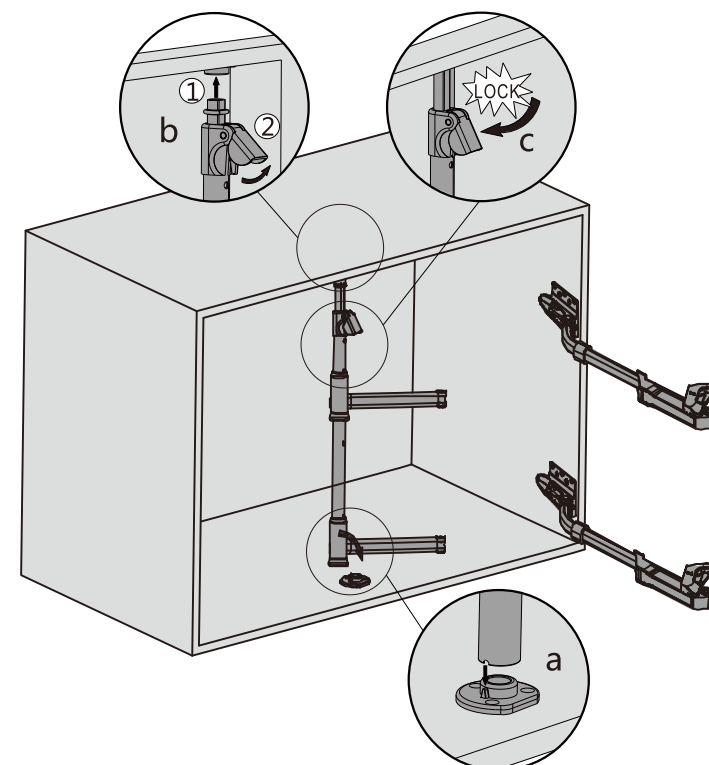


Page 4

6

6.1

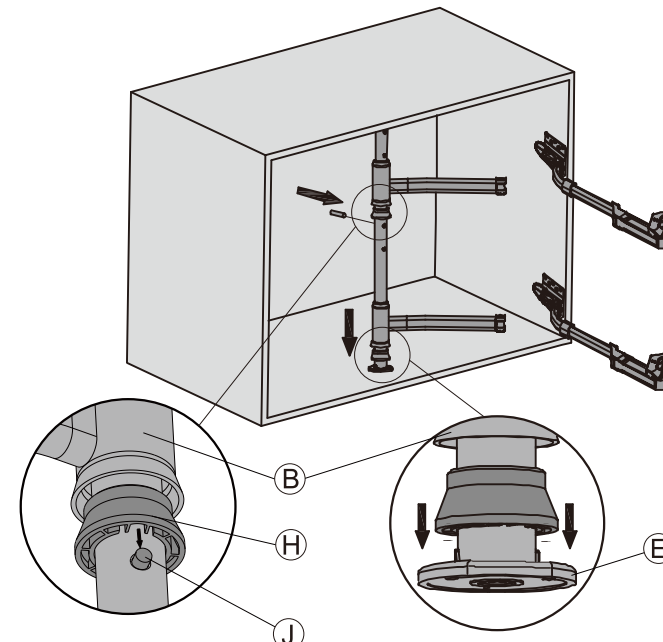


6.2

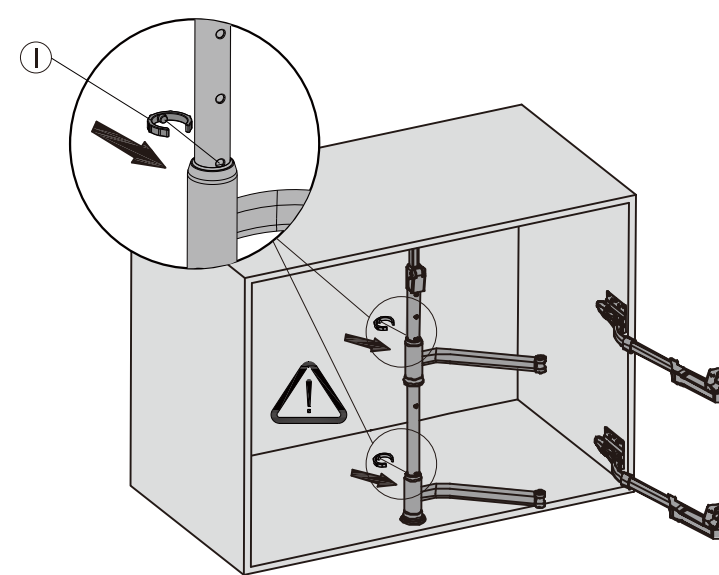

Page 5


7

7.1

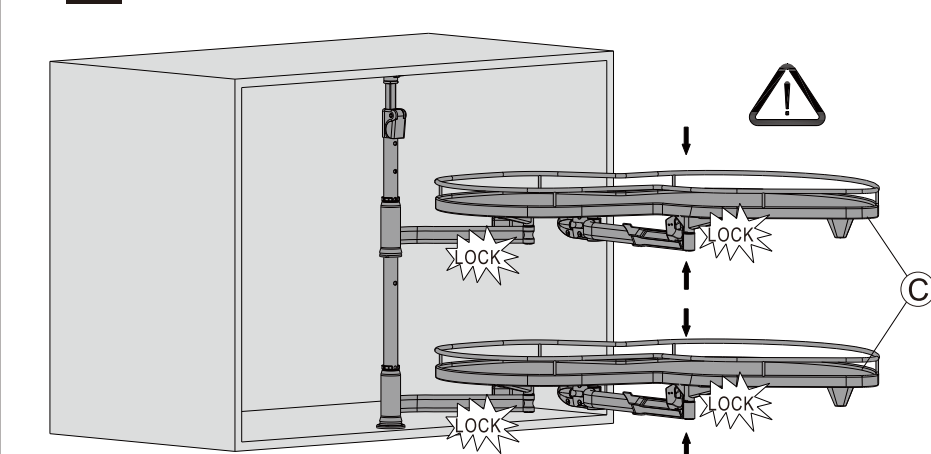

8

8.1

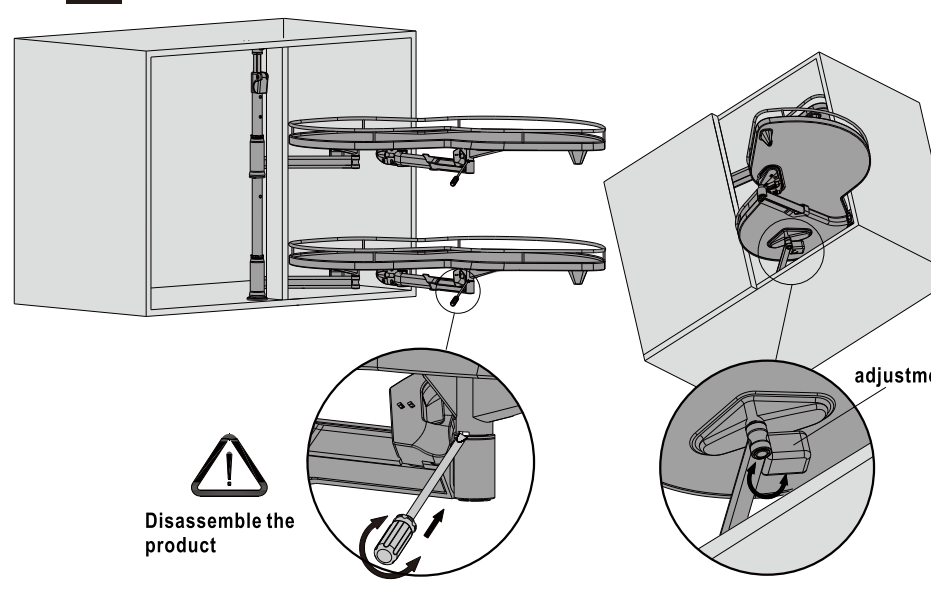

Page 6